

# inka<sup>®</sup> mobile<sup>™</sup> PEN + STYLUS

STYLO + STYLET  
STIFT + EINGABESTIFT  
BOLÍGRAFO Y LÁPIZ ÓPTICO



Unscrew Quick-Use Pen into components



Remove ink cartridge from Capacitive Stylus tip and dispose



Replace Capacitive Stylus Tip on new ink cartridge  
and reassemble pen components